

**Care and General Maintenance of your Bissell Cleaner**

**CONTENTS PAGE**

BS-7920F Pro Heat Pro-Tech.....Page 2


BS-1694F Powerwash Delux.....Page 4

BS-1950F Quickwash.....Page 6


BS- 3750F Lift Off.....Page 7

## BS-7920F Pro Heat Pro-Tech

### Cleaning of the Red Lint Filter

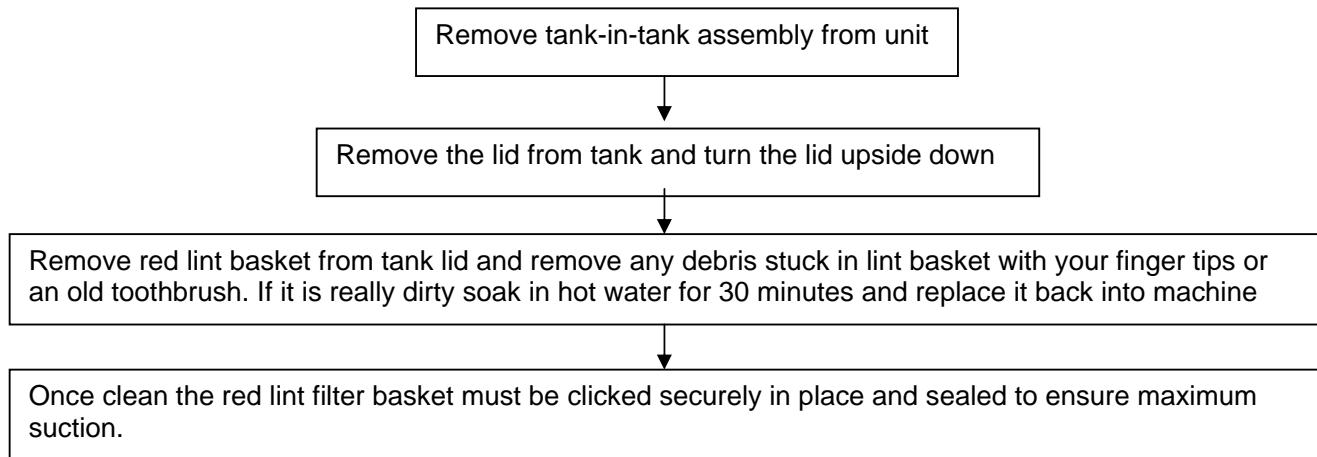

### Prevent solution build up in the machine by flushing the machine after cleaning your carpet.

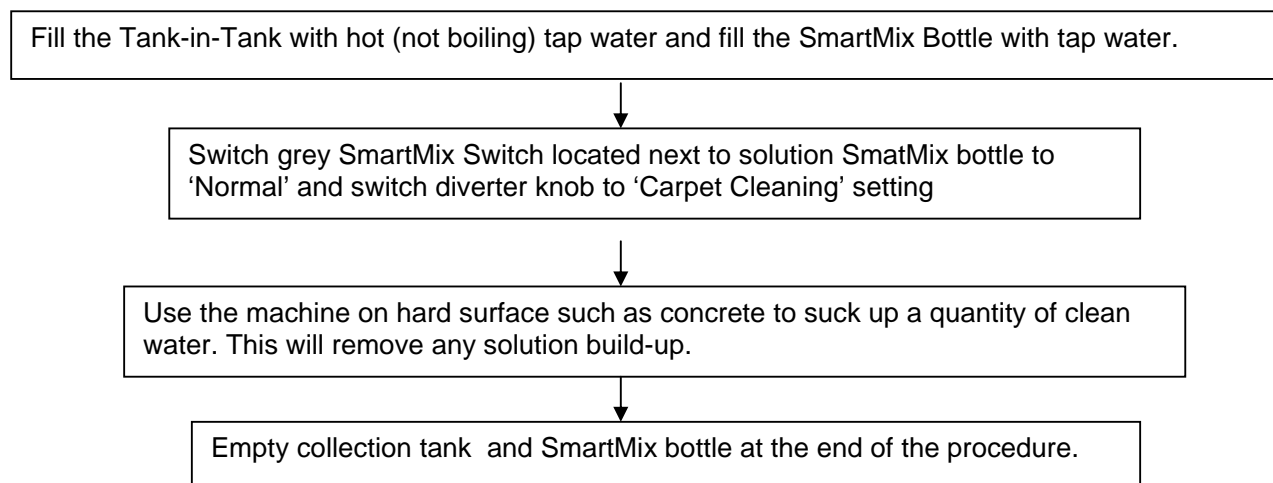

### Cleaning of front window nozzle

Fill the Tank-in-Tank with clean tap water and fill the SmartMix Bottle with hot (not boiling) tap water.

Switch grey SmartMix Switch located next to solution SmatMix bottle to 'Normal' and switch diverter knob to 'Carpet Cleaning' setting

Use the machine on hard surface such as concrete to suck up a quantity of clean water. This will remove any solution build-up.

Empty Collection Tank and SmartMix bottle at the end of the procedure.

For any difficult to remove debris that is trapped in the front window nozzle after flushing the machine, it is advisable to use a thin piece of flexible plastic to dislodge the debris.


### Cleaning underneath the front window nozzle

Wipe underneath surface with a soft cloth


Ensure after each use that hair and debris are removed from the brush roller using your fingertips or a pair of scissors, paying particular attention to the lever arms. This will prolong the life of the brush belt.

## BS-1694F Powerwash Delux


### Cleaning of the Red Lint Filter

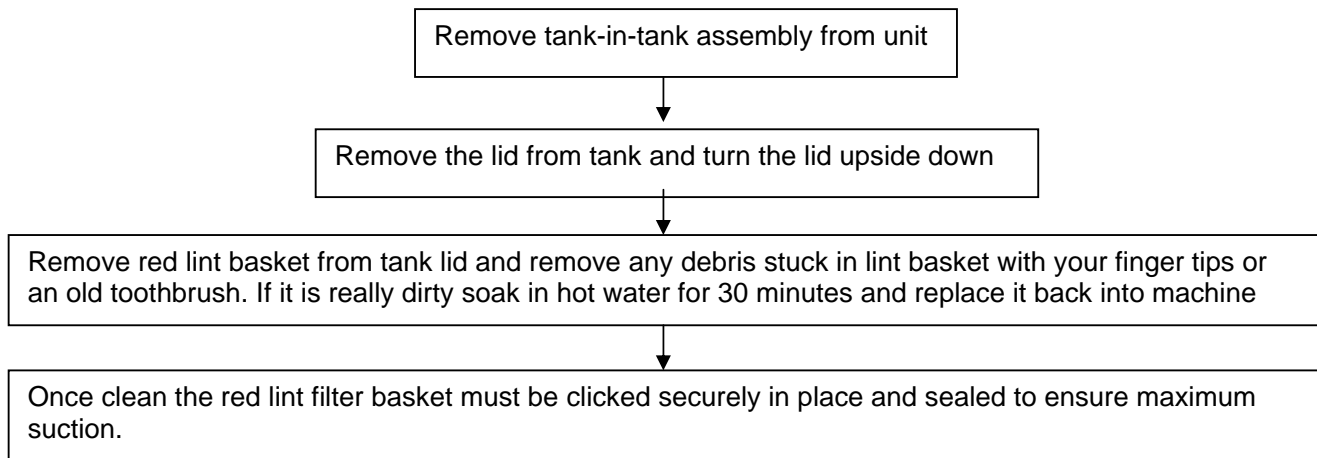


Prevent solution build up in the machine by flushing the machine after cleaning your carpet.

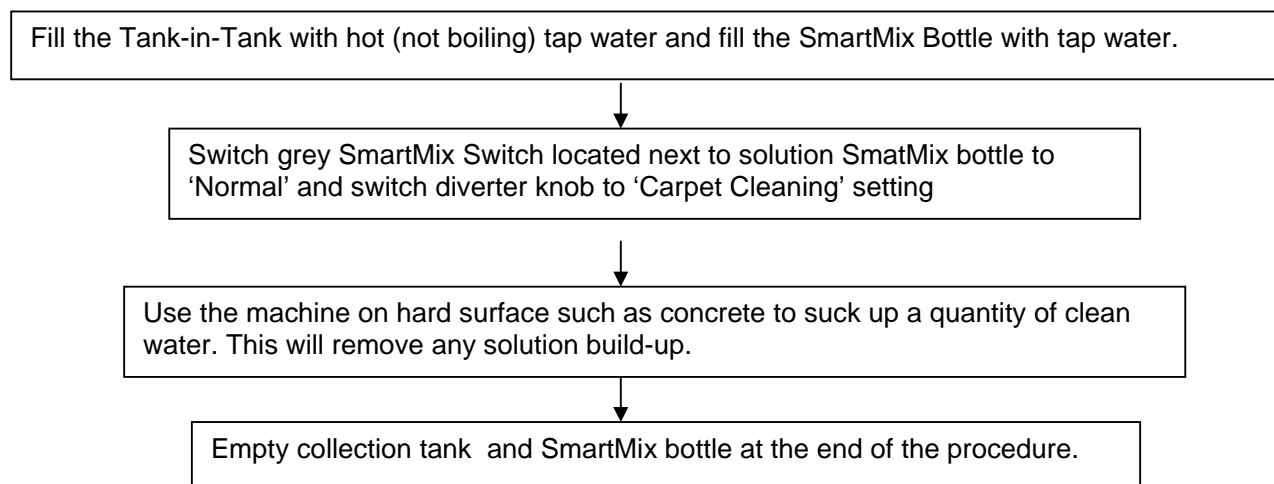

### Cleaning of front window nozzle

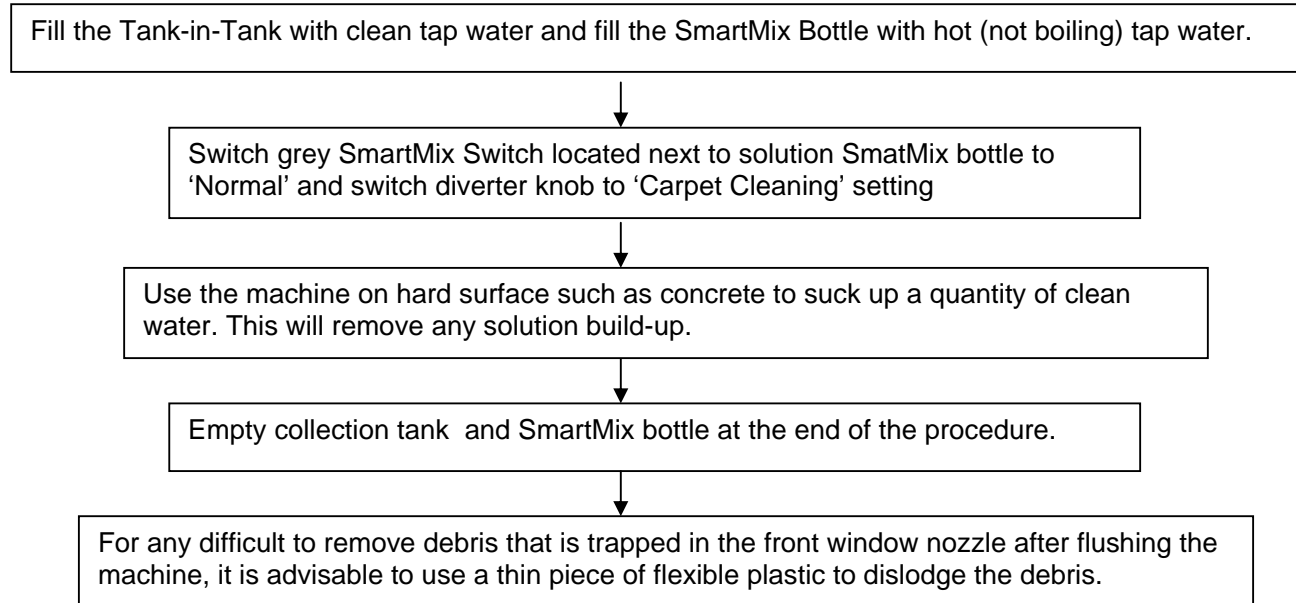

### Cleaning underneath the front window nozzle

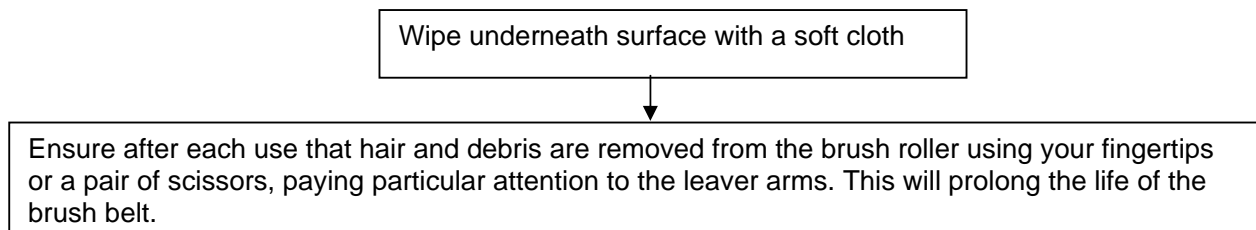


## BS-1950F Quickwash


### Cleaning Delivery Tank

Remove delivery tank and thoroughly rinse using hot (not boiling) tap water

### Cleaning underneath the front window nozzle

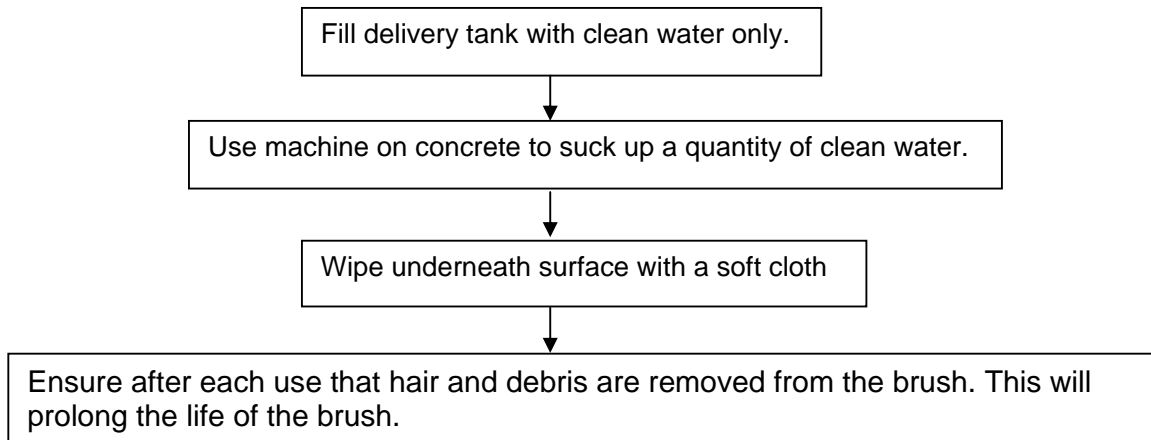


### Remove and empty Dirty Water Tank

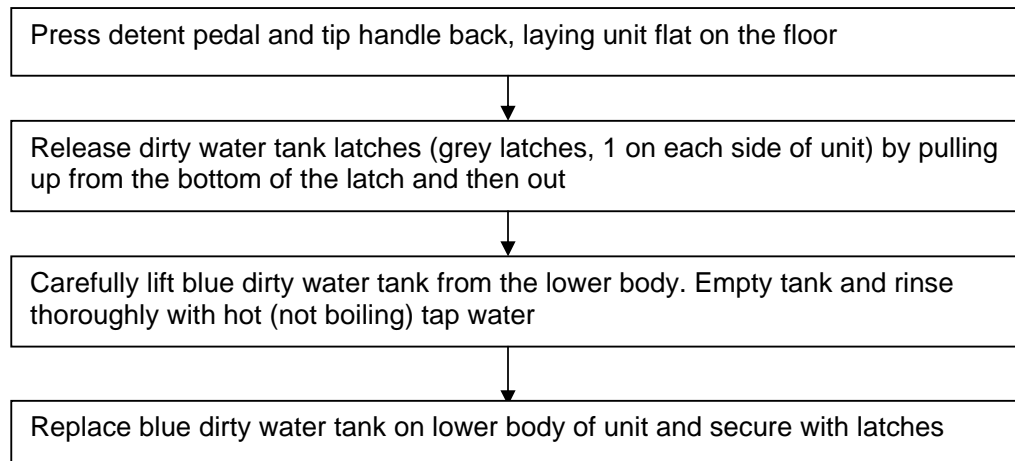

**BS- 3750F Lift Off – Refer to Yellow piece of paper supplied with machine**

**Empty the clear plastic Dirt Container**

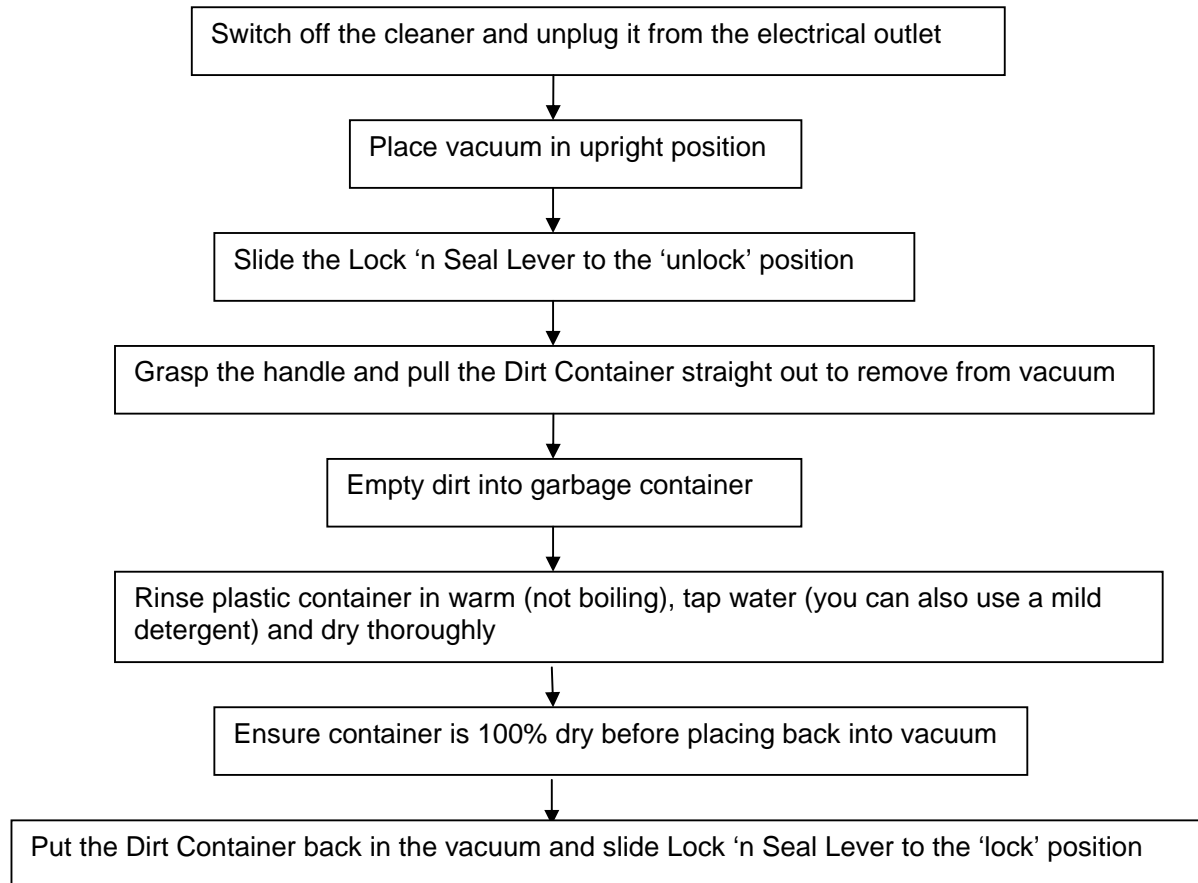

## Clean the filters

### 1. Upper-tank Filter

Switch off the cleaner and unplug it from the electrical outlet

The upper tank filter can be reached by removing the Dirt Container, reaching in underneath the Upper Tank and turning the rim of the red Filter Frame to unlock. Pull it straight down to remove.

Brush the dirt off the Upper Tank and Louvers.

The foam Upper Tank filter may be removed and hand washed in cold tap water with a mild detergent. Rinse well and then air dry thoroughly. \*\*Ensure filter is 100% dry before placing back into vacuum

The Upper Tank and Louvers may be wiped clean using a damp cloth and then dried using a dry cloth.

**\*\*NOTE:** For easier access the entire Upper Tank may be removed by turning the red knob on the back of the cleaner to 'unlock' position and pulling the entire tank straight out. Ensure the knob is turned back to 'lock' when Upper Tank is replaced back in cleaner.

### 2. Pre-motor Filter

Pull out the black slide-out tray located underneath the Dirt Container

Lift out the foam filter

The foam filter may be hand washed in cold tap water with a mild detergent. Rinse well and then air dry thoroughly. \*\*Ensure filter is 100% dry before placing back into vacuum



### 3. Hepa 12 Media Post-Motor Filter

The HEPA Filter is located on the back of the cleaner behind the white door



Open the door, pulling it downwards, remove the filter and gently tap it against the palm of your hand to remove excess dust and dirt.



Replace filter if necessary